

C7600A,C Solid State Humidity Sensors

PRODUCT DATA



SPECIFICATIONS

IMPORTANT

Specifications given herein do not include normal manufacturing tolerances. Therefore, individual units may not exactly match listed specifications. Also, this product is tested/calibrated under closely controlled conditions. Minor differences in performance can be expected if those conditions are changed.

Models: See Table 1.

Table 1. C7600A,C Solid State Humidity Sensor Models.

Model	Use With
C7600A	W7600 or controller requiring 4-20 mA reverse acting input
C7600C	H775 or controller requiring 4-20 mA direct acting input

APPLICATION

The C7600A,C Solid State Humidity Sensors sense relative humidity in air and are used with controllers that can process a 4 to 20 mA signal (see Table 1).

FEATURES

- Long-lasting solid state sensing element is accurate and stable over time.
- Sensor enclosed in rugged glass-fiber reinforced plastic case.
- Compact size and lightweight construction for easy mounting in duct or on wall.
- Top cover vents allow air flow to humidity sensing element inside.
- 4 to 20 mA output to relative air humidity.
- Can be used indoors or outdoors.
- The C7600A provides 4-20 mA output inversely proportional to air relative humidity.
- The C7600C provides 4-20 mA output directly proportional to air relative humidity.

Dimensions: See Fig. 1.

Mounting: Duct-mounted indoors, or wall-mounted outdoors in a location protected from rain, snow, or direct sunlight.

Case: Compact, rugged, lightweight plastic case.

Terminals: Two 1/4 in. (6 mm) quick-connect terminals.

Electrical Ratings:

Input: 12 to 40 Vdc.

Output: 4 to 20 mA signal. The relationship of output current vs. relative humidity is shown in Table 2 and Fig. 2 and 3. Maximum Power Consumption (at 24V): 0.50 VA.

Electrical Connections: Two 1/4 in. quick-connect terminals.

Ambient Temperature Ranges:

Operating: 32°F to 125°F (0°C to 52°C).

Shipping: -40°F to +150°F (-40°C to +66°C).



Table 2. C7600 Output Current vs. Humidity.

Model	Relationship ^a
C7600A	$I = -0.16 \times RH + 20$
C7600C	$I = +0.16 \times RH + 4$

^a I = sensor output (in mA); RH = percent relative humidity.

Humidity:

Operating Range: 10 to 90 percent RH, noncondensing.

Accuracy at 25°C/77°F (Including hysteresis):

±5%RH of nominal RH values from 30% to 70% RH

±7%RH of nominal RH values from 10% to 30% RH and 70% to 90% RH.

Time Constants:

Airflow: 500 fpm.

Time: 15 minutes.

Approvals:

Underwriters Laboratories Inc. Flammability Rating:

C7600A: UL94V-0.

C7600C: UL94-5V.

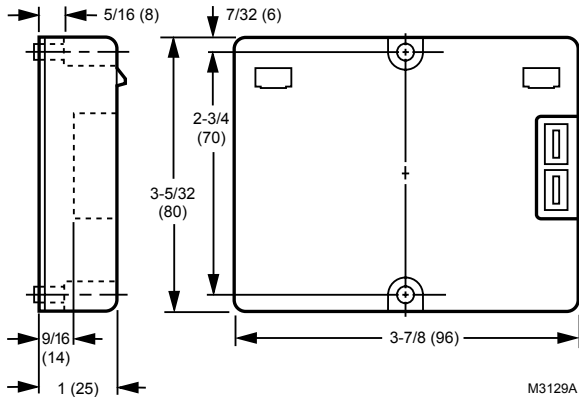


Fig. 1. C7600A,C Humidity Sensor dimensions in in. [mm].

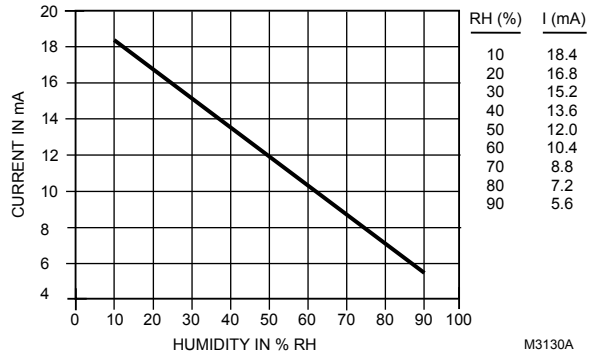


Fig. 2. C7600A output current vs. relative humidity.

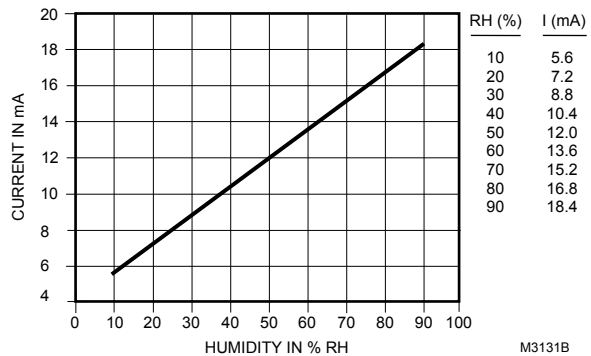


Fig. 3. C7600C output current vs. relative humidity.

ORDERING INFORMATION

When purchasing replacement and modernization products from your TRADELINE® wholesaler or distributor, refer to the TRADELINE® Catalog or price sheets for complete ordering number.

If you have additional questions, need further information, or would like to comment on our products or services, please write or phone:

1. Your local Honeywell Automation and Control Products Sales Office (check white pages of your phone directory).
2. Honeywell Customer Care
1885 Douglas Drive North
Minneapolis, Minnesota 55422-4386

In Canada—Honeywell Limited/Honeywell Limitée, 35 Dynamic Drive, Scarborough, Ontario M1V 4Z9.

International Sales and Service Offices in all principal cities of the world. Manufacturing in Australia, Canada, Finland, France, Germany, Japan, Mexico, Netherlands, Spain, Taiwan, United Kingdom, U.S.A.

INSTALLATION

When Installing this Product...

1. Read these instructions carefully. Failure to follow them could damage the product or cause a hazardous condition.
2. Check ratings given in instructions and on the product to ensure the product is suitable for your application.
3. Installer must be a trained, experienced service technician.
4. After installation is complete, check out product operation as provided in these instructions.



CAUTION

Electrical Shock or Equipment Damage Hazard. Can shock individuals or short equipment circuitry.

Disconnect power supply before installation.

IMPORTANT

All wiring must agree with applicable codes, ordinances and regulations.

Follow specific instructions furnished by the equipment manufacturer. If unavailable, follow the procedure below.

Location

The sensor can be mounted in any position where it is exposed to freely circulating air (with at least 500 fpm airflow) and proper protection.

Mounting Outdoors

IMPORTANT

When selecting the location, make certain the sensor is not exposed to rain, snow, or direct sunlight.

1. Select a location properly protected.
2. Attach the sensor to the wall with two 1/8 in. (3 mm) diameter screws.
3. Wire as shown in the Wiring section.

Mounting in Return Air Duct (See Fig. 6)

NOTE: Installers need to supply the following: sheet metal cutter or snips; drill with 1/16 in. (2 mm), 1/8 in. (3 mm) and 1/2 in. (13 mm) bits; screwdrivers; 1/2 in. (13 mm) rubber grommet; eight self-tapping sheet metal screws; and two 1/8 in. (3 mm) by 3/4 in. (19 mm) machine screws with lock washers and nuts.

1. Cut a 5 in. (127 mm) by 6 in. (152 mm) rectangular hole in one side of the return air duct.
2. Center the sensor on a 6 in. (152 mm) by 7 in. (178 mm) piece of sheet metal. Mark locations for mounting screws and for a hole for the control wire.
3. Drill two 1/8 in. (3 mm) mounting holes for the sensor and one 1/2 in. (13 mm) hole for the control wire.

4. Drill eight starting holes in the sheet metal rectangle for self-tapping sheet metal screws.
5. Center sheet metal rectangle over opening in duct so there is a 1 in. (25 mm) overlap on all four sides. Then mark the eight sheet metal screw locations on the duct.
6. Drill eight starting holes in the duct for self-tapping sheet metal screws.
7. Attach sensor to sheet metal rectangle with 1/8 in. (3 mm) by 3/4 in. (19 mm) machine screws, washers and nuts. Attach machine screws from sheet metal outside to eliminate protrusions and possible sharp edges.
8. Place a rubber grommet in the sheet metal 1/2 in. (13 mm) hole to protect control wires from abrasions.
9. Put the control wires through the 1/2 in. (13 mm) hole and wire as shown in the Wiring section.
10. Attach sheet metal rectangle to duct with self-tapping sheet metal screws. Make sure that airflow over the sensor is as shown in Fig. 6.

Wiring



CAUTION


Electrical Shock or Equipment Damage Hazard. Can shock individuals or short equipment circuitry.

Disconnect power supply before installation.

IMPORTANT

All wiring must agree with applicable codes, ordinances and regulations.

Follow wiring information furnished by the controller manufacturer or refer to Fig. 4 and 5 for typical wiring hookups. Note and follow polarity markings.

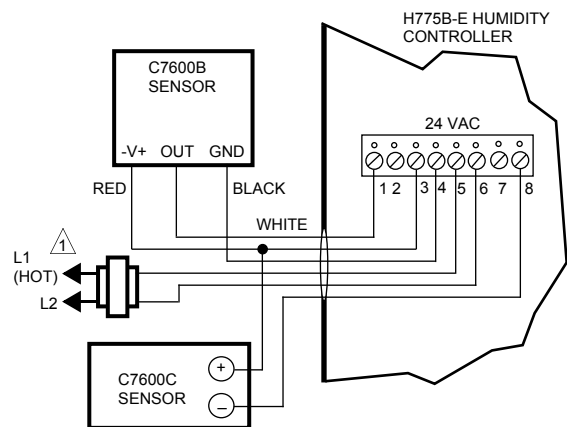

⚠ POWER SUPPLY. PROVIDE DISCONNECT MEANS AND OVERLOAD PROTECTION AS REQUIRED.

M20677

Fig. 4. Wiring C7600C and C7600B Wall-mounted Sensors to H775B-E Humidity Controller.

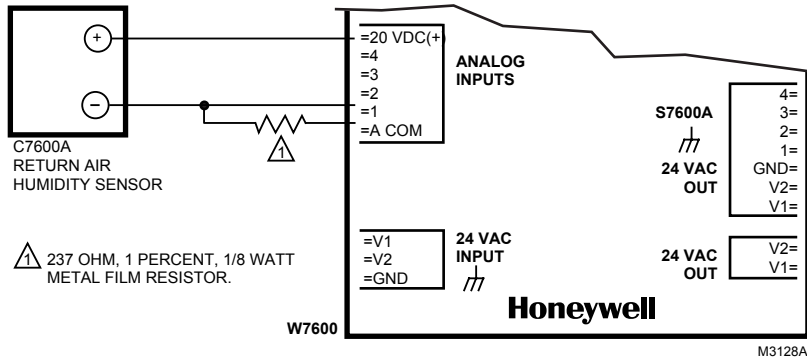


Fig. 5. Wiring C7600A Humidity Sensor to W7600 Control Module.

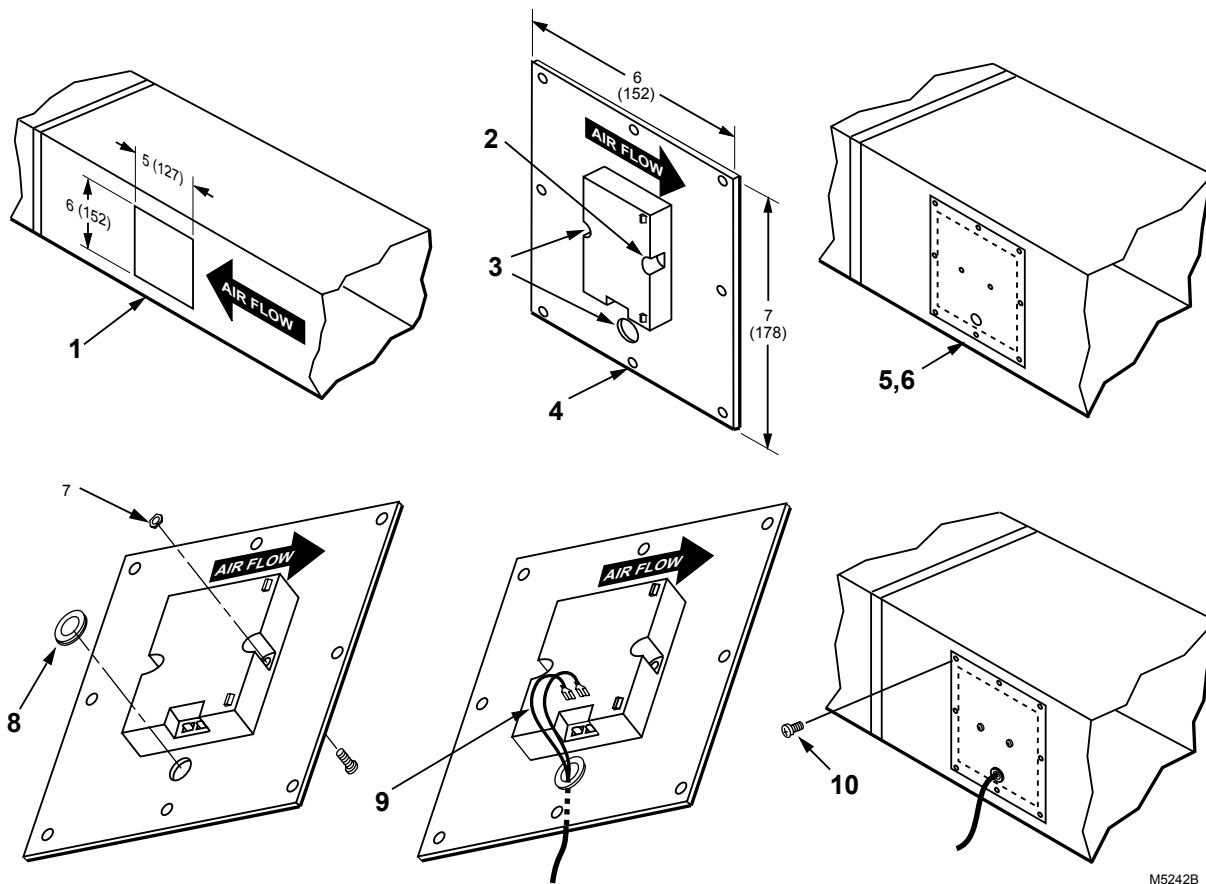


Fig. 6. Installing C7600A Solid State Humidity Sensor in return air duct.

Automation and Control Solutions

Honeywell International Inc.
1985 Douglas Drive North
Golden Valley, MN 55422
customer.honeywell.com

Honeywell Limited-Honeywell Limitée
35 Dynamic Drive
Scarborough, Ontario M1V 4Z9

® U.S. Registered Trademark
© 2006 Honeywell International Inc.
63-2418—5 C.H. Rev. 02-06

Printed in U.S.A. on recycled
paper containing at least 10%
post-consumer paper fibers.

Honeywell

By using this Honeywell literature, you agree that Honeywell will have no liability for any damages arising out of your use or modification to, the literature. You will defend and indemnify Honeywell, its affiliates and subsidiaries, from and against any liability, cost, or damages, including attorneys' fees, arising out of, or resulting from, any modification to the literature by you.